



**Morehouse**  
THE FORCE IN CALIBRATION SINCE 1925

PM-5301  
Rev. 3/2024

ISO/IEC 17025 / ANSI/NCSLI Z540.3 Accredited

## Operation and Instruction Manual

# Universal Scale Calibrator



**Model USC-60K**



Morehouse Instrument Company, Inc.  
1742 Sixth Ave., York, PA 17403-2675 USA



P: (717) 843-0081  
F: (717) 846-4193



info@mhforce.com  
www.mhforce.com



## Table of Contents

General Specifications .....	3
Assembly Instructions .....	6
Operating Instructions .....	7
Maintenance Instructions .....	8
Certificate of Capacity Load Test and Overload .....	10
Recommended Mounting Adapters .....	11

## General Specifications

### 1. Scope

The Universal Scale Calibrator is for the application of compression loads up to 60,000 lbf. The calibrator is designed to calibrate and perform corner tests on aircraft wheel platform scales with dimensions up to 38.5 x 38 x 4.625 in. (978 x 965 x 117 mm).

### 2. Compatibility

This calibrator is designed to calibrate aircraft wheel platform scales with capacities up to 60,000 lbf, using specific sizes of standard load cells.

### 3. Design Requirements

The calibrator consists of a frame assembly with a motorized adjustable crosshead, a hydraulic force application system consisting of a hydraulic jack with a hand pump, and mounting adapters. It is designed to apply force through a standard load cell fastened to the hydraulic jack. Load cells are not included.

## 4. Performance & Product Characteristics

### 4.1 Functional Requirements

The calibrator is a floor-mounted unit. Optional legs with leveling feet raise the platen working area to approximately 29 inches from the floor. The calibrator is used to calibrate aircraft wheel load scales from 1,000 to 60,000 lbf.

### 4.2 Capacity

The calibrator has a working (rated) capacity of 60,000 lbf.

### 4.3 Overload


The calibrator has been proof loaded 10% above the working capacity of 60,000 lbf. However, the working (rated) capacity of 60,000 lbf should not be exceeded.



## 5 Details of Components

### 5.1 Frame Assembly

The frame assembly consists of a mounting base with a platen, threaded tension tie bars, and a moveable crosshead. The usable area of the platen is 58 inches long by 40.5 inches wide. The platen is drilled with a 1-inch diameter center hole. The moveable crosshead adjustment range permits the hydraulic jack ram to be positioned between not less than 6 inches and 24 inches from the top of the platen. The crosshead height above the platen is adjusted using the electric motor on the top beam. The motor operates on 115 volts, 60-cycle, single-phase power.

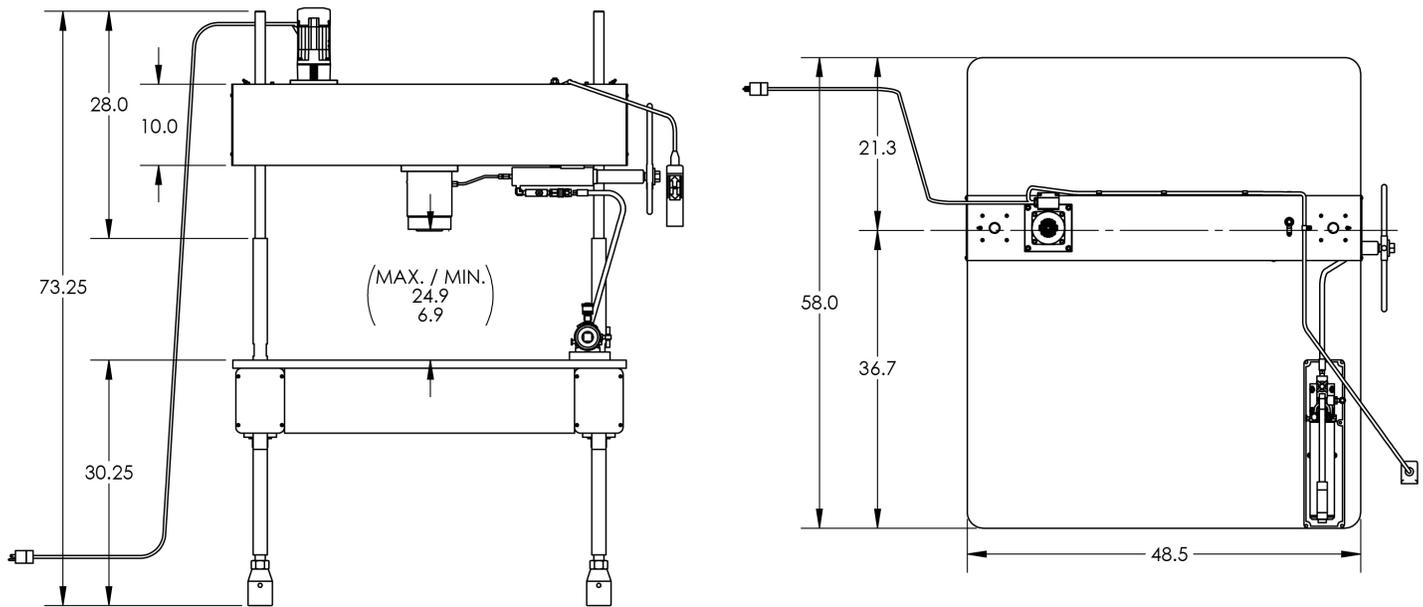

**Figure 1: Dimensions of 60,000 lbf Universal Scale Calibrator**

## 5.2 Hydraulic Force Application System

The hydraulic force application system consists of a 60,000 lbf capacity Morehouse hydraulic jack that is mounted on the moveable crosshead. The jack is used to apply a vertical force between the adjustable crosshead and the platen, where the scale being calibrated is placed.

### 5.2.1 Hydraulic Jack

The hydraulic jack has a working capacity of 60,000 lbf and is specially designed to have the lowest possible leak rate, making it suitable for force calibration work. The jack ram is provided with threaded adapters for fastening the load cell standards to it. The jack ram has a vertical stroke of 1 inch and will fully retract when hydraulic pressure is released.

### 5.2.2 Hand Pump


The hydraulic jack is activated by a hand pump, which has a vernier screw piston. The pump is connected to the jack with a hydraulic hose that has a quick disconnect on one end. See manual PM-5251 for complete operating instructions.



Figure 2: Hand Pump for Universal Scale Calibrator

### 5.2.3 Universal Hydraulic Pump

If the optional UHP is purchased, see manual PM-5251 for complete operating instructions.

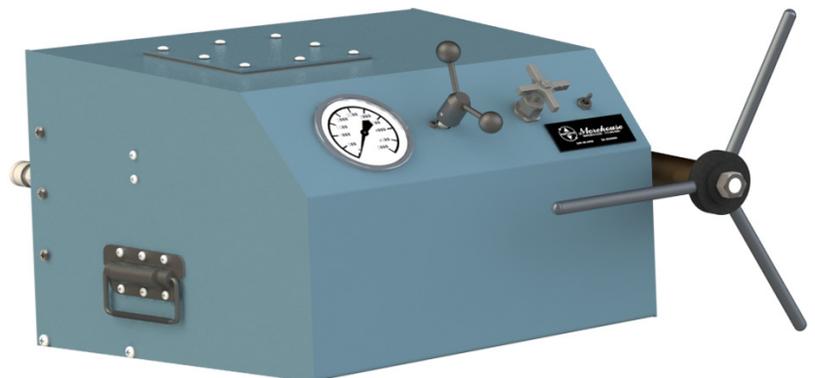

## Assembly Instructions

1. The calibrator is crated for shipment with the legs unattached from the frame. Remove the calibrator from the shipping crate and attach the legs to the frame.
2. Move the calibrator to the desired location and level the platen table using the adjustable feet. The calibrator weighs approximately 1,600 pounds and is designed to sit directly on the floor.
3. The hand pump has been fastened to the machine platen for shipping. Remove the hand pump from the platen by removing the two screws holding the hand pump drip pan to the platen.
4. The top surface of the platen and the unthreaded portion of the tie bars have been coated with a rust inhibitor. This is removed using mineral spirits. After removing the rust inhibitor, these surfaces should be coated with light oil to prevent rust and corrosion.
5. Before using the calibrator, check the hydraulic force application system.

5.1 Check the hydraulic fluid in the hand pump by removing the fill plug. The fill plug should be left open for about two turns during operation. If hydraulic fluid must be added, use petroleum-based anti-wear hydraulic fluid with an ISO Viscosity Grade of 22 or 32. The following hydraulic fluids are recommended, but any equal hydraulic fluid may be used:

Arco . . . . .	Dutro AW 32
Conoco . . . . .	Super Hydraulic 32
Drydene Oil Co . . . . .	Paradene 22 AW
Exxon . . . . .	Nuto H 32
Gulf . . . . .	Harmony 32 AW
Mobil . . . . .	DTE 24
Texaco . . . . .	Rando HD 32

5.2 Prepare the hydraulic jack for use. The hydraulic jack is furnished with a self-sealing hose coupling and has been fully bled and checked at the factory before shipment. However, if the hand pump and hydraulic jack seem “spongy” during use, air may be in the system. If this occurs, bleed the system of entrapped air using the procedure outlined in the Maintenance section of this manual.

## Operating Instructions

1. Adjust the height of the crosshead to allow space between the calibrator's platen and the hydraulic ram for the load cell to be installed. Use the momentary pendant switch with electric motor to raise and lower the crosshead. The motor operates on 115 volts, 60 cycle, single phase power. An 220 volt, 50-cycle, single phase motor is available as an option.
2. Fasten the load cell base to the hydraulic ram using the  $\frac{3}{4}$ -16 threaded adapter. This adapter has been screwed into the jack for shipping and should always be kept there when not in use. Fasten the load cell base to the hydraulic ram using the  $\frac{3}{4}$ -16 threaded adapter. This adapter has been screwed into the jack for shipping and should always be kept there when not in use. Be sure the load cell is turned completely into the threaded adapter, and there is no space between the base of the load cell and the hydraulic ram. The base of the load cell must be tight against the hydraulic ram.
3. Raise the adjustable crosshead and place the aircraft wheel platform scale to be calibrated on the calibrator's platen. The scale should be centered on the platen.
4. Use the appropriate loading blocks as specified by the calibration procedure to calibrate the scale. Center the 6-inch diameter compression pad supplied with the calibrator on the loading blocks. The side with the machined pocket should be up. Next, place the load cell's load button on the 6-inch diameter compression pad. The load button should fit in the pocket machined in the 6-inch diameter compression pad.
5. Adjust the height of the crosshead so there is approximately  $\frac{1}{8}$ -inch clearance between the load button's spherical radius and the mating radius on the load cell. Be sure the load button is properly positioned to mate with the load cell's spherical radius.
6. The desired forces are now applied. The hand pump is used to activate the hydraulic jack. This pump functions similar to other hand pumps. With the pump connected to the hydraulic jack, operating the hand lever causes hydraulic oil from the pump reservoir to be pumped into the hydraulic jack. During pump operation, the fill plug on the upper right side of the pump body should be open about two turns to serve as a reservoir vent. To operate the hand pump, the relief valve must be closed. To close the relief valve, turn the handle toward the hose connection of the pump body.
7. The hand pump is a dual-volume design based on a double-diameter piston. On the side of the hand pump is a valve rod. With the rod pulled out, the full diameter of the piston is effective for low-pressure, high-volume pumping. With the rod pushed in, the reduced diameter is effective for high-pressure, low-volume pumping with minimum effort. **Caution: Before pushing the rod in, release any downward pressure applied to the hand lever.**

8. After the pressure has been pumped up with the hand lever, adjust to the approximate force desired. Use the star wheel of the Vernier screw piston to obtain and maintain the exact force required. **Caution: Do not exceed the one-inch stroke of the jack ram, or considerable damage will result.**
9. After the desired forces have been applied, to release the pressure turn the handle of the relief valve toward the back of the pump body. This will release pressure and the jack ram will return automatically.

## Maintenance Instructions

1. The top surface of the platen, the unthreaded portion of the tie bars, and the face of the jack ram should be coated with light oil to prevent rust and corrosion. We recommend wiping these areas with light oil after each use.
2. The calibrator should be given a routine service inspection at regular intervals, the frequency of which depends upon how often and under what circumstances it is used. During this inspection, check the equipment for rust, leaking hydraulic fluid, and other visible signs of deterioration or damage. The inspection should include a visible inspection of all welds on the upper frame beam. Be sure to check all nuts, bolts, and screws to ensure they are tight. Check the oil level in the pump reservoir and examine the O-ring seals. Replace any ring that is split, cut, or otherwise damaged. After an extended period of heavy service, it is advisable to disassemble and clean the pump. Cleaning the pump consists simply of washing or blowing out the body casting and washing the parts. Refer to step 6 below for disassembly instructions.
3. Routine maintenance of the machine includes replacing O-ring seals in the pump assembly, adding hydraulic fluid if required, removing rust, dirt, and corrosion from all assemblies, touching up paint damage, tightening any nuts or set screws that have loosened, and re-leveling. If the pump and jack assembly fail to develop or hold pressure, corrective maintenance may be necessary.
  - 3.1. If the hand lever is operated and the pump fails to develop pressure, be sure the relief valve is closed and there is sufficient fluid in the reservoir. If failure continues, then one or both of the check valves may be leaking. Replace both O-rings to be sure.
  - 3.2. If the pump builds up pressure but the pressure drops, then examine all joints for leakage; a very small amount of leakage will result in a considerable loss of pressure. As the pressure drops, watch the hand lever. If it rises, the discharge check valve is leaking. Replace the O-ring (29). If the hand lever does not rise as the pressure drops, the relief valve is leaking. A foreign particle may be lodged on the seat, but more likely, the O-ring (39) has failed and must be replaced.

3.3 The outlet in the pump body is tapped with **9/16-18 SAE ORB (-6)** thread and machined for O-ring seals (15). A firm joint will prevent leakage. If leakage develops do not tighten the fitting excessively; replace the O-ring seal. If leakage develops do not tighten the fitting excessively; replace the O-ring seal. **Caution: Do not screw pipe threads directly into the pump body outlet. The special adapter (53) is provided with pipe threads for making connections.**

4. Routine lubrication consists of adding a few drops of oil to the chain drive on the upper frame and applying grease to any grease fittings. The grease used should conform to NLGI 2 specifications.

5. If the hand pump and hydraulic jack seem rather “spongy” during use there may be air in the system. If this occurs, bleed the system of entrapped air. To bleed the hydraulic jack, remove it from the calibrator and place it on its side on a suitable work surface, then proceed as follows:

5.1 Check the supply of fluid in the pump reservoir by removing the fill plug (item 30). The fill plug must be left open about two turns during operation to serve as a reservoir vent. If hydraulic fluid must be added, then use petroleum base anti-wear hydraulic fluid with an ISO Viscosity Grade of 22 or 32, as recommended in the Assembly Instructions.

5.2 With the hydraulic hose disconnected from the hydraulic jack, and connected only to the hand pump, pump the hydraulic hose full of hydraulic fluid. The poppet of the hose half of the self-sealing quick-disconnect coupling must be depressed to accomplish this.

5.3 Connect the hydraulic hose to the jack cylinder fitting, and pump the jack ram out to full stroke, approximately 1 inch.

5.4 Roll the jack to bring the air bleed location to the highest point.

5.5 Alternately, open the air bleed and roll the jack back and forth. The ram return spring will keep sufficient pressure on the fluid to purge the air.

5.6 After the jack has been bled of all entrapped air, tighten the air bleed securely and return the jack to its original position on the calibrator.

6. Servicing the hand pump includes replacing the O-rings, seals and cleaning. When changing O-rings, always lubricate the O-rings and all contacting metal parts before attempting assembly. For a lubricant, use the same fluid that will be used in the system.

The high-pressure valve poppet and retaining parts are held in place by the retaining plug (57). To reassemble, screw the retaining plug (57) into the body until all parts are solid, then back it off about two turns. This provides sufficient travel for the poppet.

7. All parts of the calibrator (except O-rings and seals) are designed to last indefinitely in normal use. Inadvertent misuse or accidental damage may occur in which case repair may best be affected by replacing the damaged parts.

8. Parts typically needed for maintenance or replacement are:

Item	Description
HYD:692000SK	Hand Pump Seal Kit
HYD:139000SK	60k lbf Hydraulic Jack Seal Kit
HYD:USJ-60MD-200-01	60k Hydraulic Jack

Order parts from:

Service Department  
Morehouse Instrument Company  
1742 Sixth Avenue  
York, PA 17403-2675 U.S.A.

## Certificate of Capacity Load Test and Overload

This certifies the Universal Scale Calibrator was tested for capacity and overload.

The Universal Scale Calibrator was loaded to its rated working capacity of 60,000 lbf, and held for five minutes.

The calibrator was also proof loaded to 66,000 lbf, 10 % above its working capacity.

## Recommended Mounting Adapters

The Scale Reference Mounting Kit (SRK) includes recommended adapters for the reference standard in a Universal Scale Calibrator.

The kit includes:

1. Detent pin
2. Base thread adapter
3. Ball adapter
4. Ball cup

### English units (lbf)

The kit is designed around Morehouse Shear Web load cells. Capacities are approximately 2K lbf, 25K lbf, 60K and 100K lbf. Note: The 100K load cell can only be used to 60,000 lbf capacity.

Load Cell	2,000 - 10,000 lbf	25,000 - 50,000 lbf	60,000 lbf	100,000 lbf
Order Code	SRK-10k	SRK-50k	SRK-60k	SRK-100k

### SI units (kN)

The kit is designed around Morehouse Shear Web load cells. Capacities are approximately 20 kN, 100 kN, 250 kN and 500 kN. Note: The 500 kN load cell can only be used to 250 kN capacity.

Load Cell	20 - 50 kN	100 -200 kN	250 kN	500 kN
Order Code	SRK-50kN	SRK-200kN	SRK-250kN	SRK-500kN

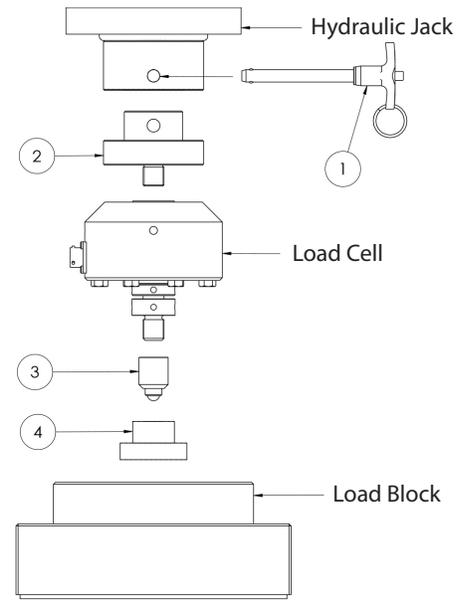


Figure 3: Scale Reference Mounting Kit

 **WARNING:** Morehouse Instrument Company products are precision instruments for specific force or torque calibration applications. Improper use, exceeding stated capacities, or unauthorized modifications can result in severe injury, death, machine damage, and warranty voiding. Always ensure proper installation, alignment, and use within specified limits. Do not use damaged or visibly compromised components. Refer to your product manual for proper use and specifications. If you have questions about a Morehouse Instrument Company product's capabilities or limitations or to access a manual, please contact your sales representative or email [info@mhforce.com](mailto:info@mhforce.com).

 Dansk

**ADVARSEL:** Morehouse Instrument Company produkter er præcisionsinstrumenter til specifikke kraft- eller momentkalibreringsapplikationer. Forkert brug, overskridelse af angivne kapaciteter eller uautoriserede ændringer kan resultere i alvorlig personskade, død, maskinskade og bortfald af garanti. Sørg altid for korrekt installation, justering og brug inden for specificerede grænser. Brug ikke beskadigede eller synligt defekte komponenter. Se din produktmanual for korrekt brug og specifikationer. Hvis du har spørgsmål om et Morehouse Instrument Company-produkts egenskaber eller begrænsninger, eller for at få adgang til en manual, bedes du kontakte din salgsrepræsentant eller sende en e-mail til [info@mhforce.com](mailto:info@mhforce.com).

 Nederlands

**WAARSCHUWING:** Morehouse Instrument Company producten zijn precisie-instrumenten voor specifieke kracht- of koppelkalibratietoepassingen. Onjuist gebruik, het overschrijden van de vermelde capaciteiten of ongeautoriseerde wijzigingen kunnen leiden tot ernstig letsel, overlijden, schade aan de machine en het vervallen van de garantie. Zorg altijd voor een correcte installatie, uitlijning en gebruik binnen de gespecificeerde grenzen. Gebruik geen beschadigde of zichtbaar aangetaste onderdelen. Raadpleeg uw producthandleiding voor correct gebruik en specificaties. Als u vragen heeft over de mogelijkheden of beperkingen van een Morehouse Instrument Company product, of om toegang te krijgen tot een handleiding, neem dan contact op met uw verkoopvertegenwoordiger of stuur een e-mail naar [info@mhforce.com](mailto:info@mhforce.com).

 Vlaams

**WAARSCHUWING:** Morehouse Instrument Company producten zijn precisie-instrumenten voor specifieke kracht- of koppelkalibratietoepassingen. Onjuist gebruik, het overschrijden van de vermelde capaciteiten of ongeautoriseerde wijzigingen kunnen leiden tot ernstig letsel, overlijden, schade aan de machine en het vervallen van de garantie. Zorg altijd voor een correcte installatie, uitlijning en gebruik binnen de gespecificeerde grenzen. Gebruik geen beschadigde of zichtbaar aangetaste onderdelen. Raadpleeg uw producthandleiding voor correct gebruik en specificaties. Als u vragen heeft over de mogelijkheden of beperkingen van een Morehouse Instrument Company product, of om toegang te krijgen tot een handleiding, neem dan contact op met uw verkoopvertegenwoordiger of stuur een e-mail naar [info@mhforce.com](mailto:info@mhforce.com).

 Français

AVERTISSEMENT: Les produits Morehouse Instrument Company sont des instruments de précision destinés à des applications spécifiques d'étalonnage de force ou de couple. Une utilisation incorrecte, un dépassement des capacités indiquées ou des modifications non autorisées peuvent entraîner des blessures graves, la mort, des dommages à la machine et l'annulation de la garantie. Veuillez toujours à une installation, un alignement et une utilisation corrects dans les limites spécifiées. N'utilisez pas de composants endommagés ou visiblement compromis. Reportez-vous au manuel de votre produit pour une utilisation correcte et les spécifications. Si vous avez des questions sur les capacités ou les limites d'un produit Morehouse Instrument Company, ou pour accéder à un manuel, veuillez contacter votre représentant commercial ou envoyer un courriel à [info@mhforce.com](mailto:info@mhforce.com)

 Deutsch

WARNUNG: Produkte der Morehouse Instrument Company sind Präzisionsinstrumente für spezifische Kraft- oder Drehmomentkalibrierungsanwendungen. Unsachgemäßer Gebrauch, Überschreitung der angegebenen Kapazitäten oder unbefugte Änderungen können zu schweren Verletzungen, Tod, Maschinenschäden und zum Erlöschen der Garantie führen. Stellen Sie stets eine korrekte Installation, Ausrichtung und Verwendung innerhalb der angegebenen Grenzen sicher. Verwenden Sie keine beschädigten oder sichtbar beeinträchtigten Komponenten. Beachten Sie Ihr Produkthandbuch für die korrekte Verwendung und Spezifikationen. Wenn Sie Fragen zu den Fähigkeiten oder Einschränkungen eines Produkts der Morehouse Instrument Company haben oder um auf ein Handbuch zuzugreifen, wenden Sie sich bitte an Ihren Vertriebsmitarbeiter oder senden Sie eine E-Mail an [info@mhforce.com](mailto:info@mhforce.com).

 Italiano

AVVERTENZA: I prodotti Morehouse Instrument Company sono strumenti di precisione per applicazioni specifiche di calibrazione della forza o della coppia. L'uso improprio, il superamento delle capacità dichiarate o le modifiche non autorizzate possono provocare gravi lesioni, morte, danni alle macchine e l'annullamento della garanzia. Assicurarsi sempre di una corretta installazione, allineamento e utilizzo entro i limiti specificati. Non utilizzare componenti danneggiati o visibilmente compromessi. Fare riferimento al manuale del prodotto per l'uso corretto e le specifiche. In caso di domande sulle capacità o sui limiti di un prodotto Morehouse Instrument Company, o per accedere a un manuale, contattare il proprio rappresentante di vendita o inviare un'e-mail a [info@mhforce.com](mailto:info@mhforce.com).

 Norsk

ADVARSSEL: Morehouse Instrument Company-produkter er presisjonsinstrumenter for spesifikke kraft- eller momentkalibreringsapplikasjoner. Feil bruk, overskridelse av oppgitte kapasiteter eller uautoriserte modifikasjoner kan føre til alvorlig personskade, død, maskinskade og bortfall av garanti. Sørg alltid for riktig installasjon, justering og bruk innenfor angitte grenser. Ikke bruk skadede eller synlig defekte komponenter. Se produktets bruksanvisning for riktig bruk og spesifikasjoner. Hvis du har spørsmål om et Morehouse Instrument Company-produkts egenskaper eller begrensninger, eller for å få tilgang til en manual, vennligst kontakt din salgsrepresentant eller send en e-post til [info@mhforce.com](mailto:info@mhforce.com).

 Português

AVISO: Os produtos da Morehouse Instrument Company são instrumentos de precisão para aplicações específicas de calibração de força ou torque. O uso inadequado, a superação das capacidades declaradas ou modificações não autorizadas podem resultar em ferimentos graves, morte, danos à máquina e anulação da garantia. Certifique-se sempre da instalação, alinhamento e uso corretos dentro dos limites especificados. Não use componentes danificados ou visivelmente comprometidos. Consulte o manual do seu produto para uso e especificações adequados. Se você tiver dúvidas sobre os recursos ou limitações de um produto da Morehouse Instrument Company, ou para acessar um manual, entre em contato com seu representante de vendas ou envie um e-mail para [info@mhforce.com](mailto:info@mhforce.com).

 Español

ADVERTENCIA: Los productos de Morehouse Instrument Company son instrumentos de precisión para aplicaciones específicas de calibración de fuerza o par. El uso inadecuado, la superación de las capacidades indicadas o las modificaciones no autorizadas pueden provocar lesiones graves, la muerte, daños en la máquina y la anulación de la garantía. Asegúrese siempre de que la instalación, la alineación y el uso sean correctos dentro de los límites especificados. No utilice componentes dañados o visiblemente comprometidos. Consulte el manual de su producto para conocer el uso y las especificaciones correctas. Si tiene preguntas sobre las capacidades o limitaciones de un producto de Morehouse Instrument Company, o para acceder a un manual, póngase en contacto con su representante de ventas o envíe un correo electrónico a [info@mhforce.com](mailto:info@mhforce.com).

 Svenska

VARNING: Morehouse Instrument Companys produkter är precisionsinstrument för specifika kraft- eller vridmomentkalibreringsapplikationer. Felaktig användning, överskridande av angivna kapaciteter eller obehöriga modifieringar kan leda till allvarliga personskador, dödsfall, maskinskador och upphävande av garantin. Se alltid till att installationen, inriktningen och användningen är korrekt inom angivna gränser. Använd inte skadade eller synligt komprometterade komponenter. Se din produkthandbok för korrekt användning och specifikationer. Om du har frågor om ett Morehouse Instrument Company- produkts kapacitet eller begränsningar, eller för att komma åt en manual, vänligen kontakta din säljrepresentant eller e-posta [info@mhforce.com](mailto:info@mhforce.com).